


Movement Instructions Manual

CAL. 2115 (Manufacturer Miyota)

Features

- Hour, minute- and second hands.
- Date

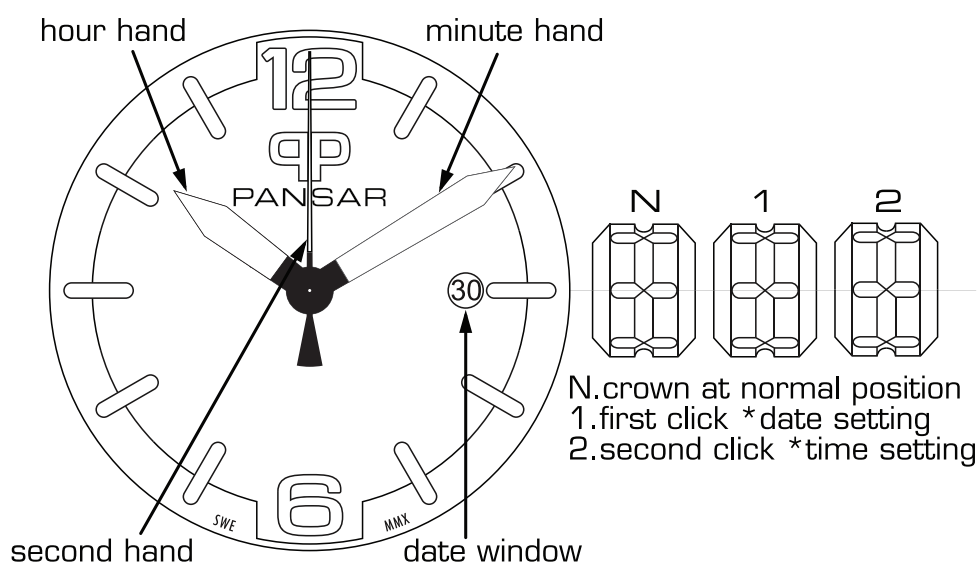

-Date position may be located at different position depends on models.

How to set time and date:

- 1a. Pull the crown out to the 2nd position.
- 2a. Turn the crown to set hour and minute hands.
- 3a. When the crown is pushed back to the normal position, second hand begins to run.
- 1b. Pull the crown out to the 1st position.
- 2b. Turn the crown counter clockwise to set the date.
- 3b. After the date has been set, push the crown back to the normal position.

Note: If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change properly.

QP
PANSAR

PANSAR SWEDEN AB
mässvägen, 125 30 Älvsjö, Sweden