

Moonracer 001 Space Edition


Cal. VD53B chronograph

Movement Instructions Manual

CAL. VD53B (Manufacturer SII (Seiko) 24-HOUR CHRONOGRAPH

Features

- Hour, minute- and second hands.
- Date
- Stopwatch
- The stopwatch can measure up to 59' 59".
- Split time measurement.

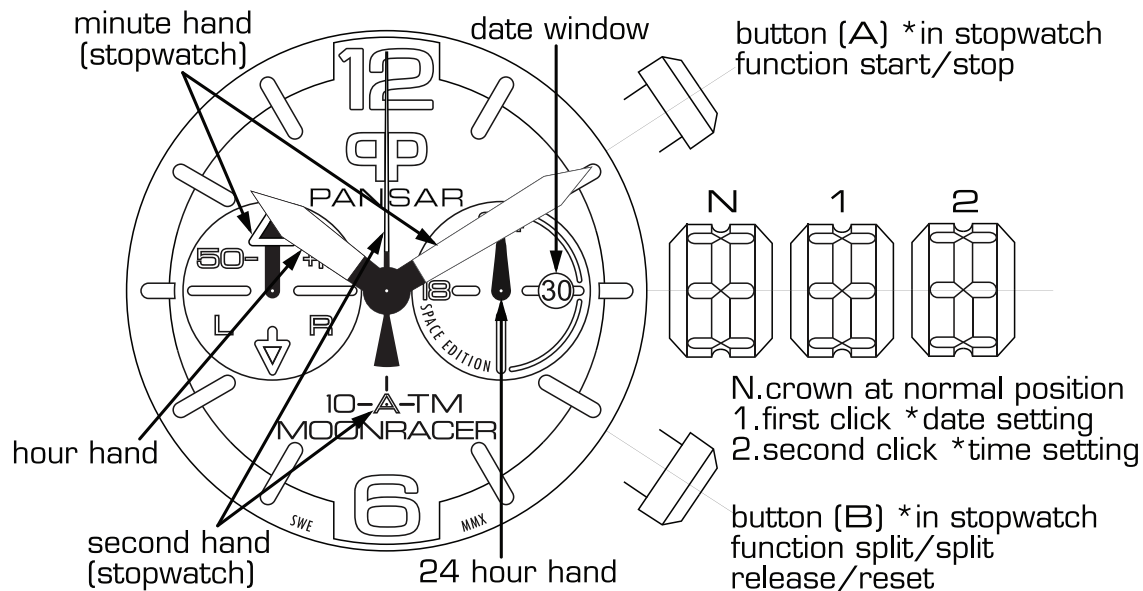

Movement Size 12'''

Outside Diameter 29.50 mm (12H-6H) x 26.00 mm (3H-9H)

Casing Diameter 28.80 mm (12H-6H)

Height 4.57 mm (Include battery)

Battery SR920SW

Battery Life Approx. 2 years

-Battery life indicator.

When the battery nears its end, the second hand moves at two second intervals instead of normal one second interval. In that case, have the battery replaced with a new one as soon as possible.

Note: The watch remains accurate while the second hand is moving at two second intervals.

QP
PANSAR[®]

PANSAR SWEDEN AB
mässvägen, 125 30 Älvsjö, Sweden


Moonracer 001 Space Edition

Cal. VD53B chronograph


Movement Instructions Manual

How to set time and date:

Before setting the time, check if the stopwatch second and minute hands are at the "0" position (12 o'clock). If the stopwatch is in use, press the button in the following order to reset it, and then, check if the hands return to "0" position.

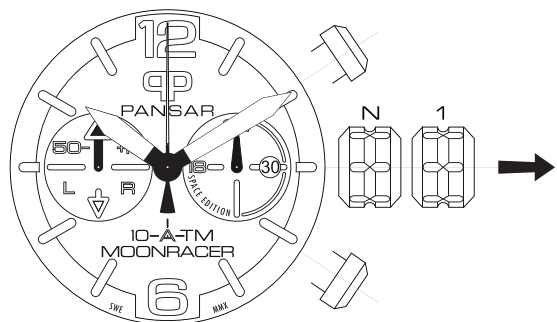


- Pull crown out to 1st. click position.

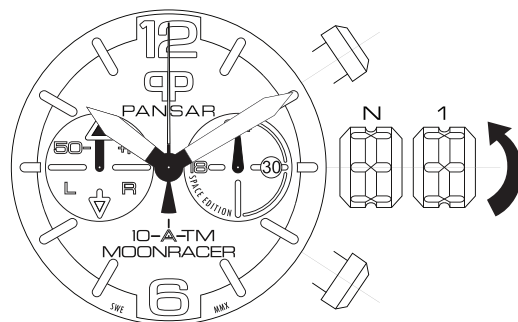


- Turn the crown clockwise until the previous day's date appears.


Note: Do not set the date between 9:00 PM and 1:00 AM. Otherwise, the date may not change properly.

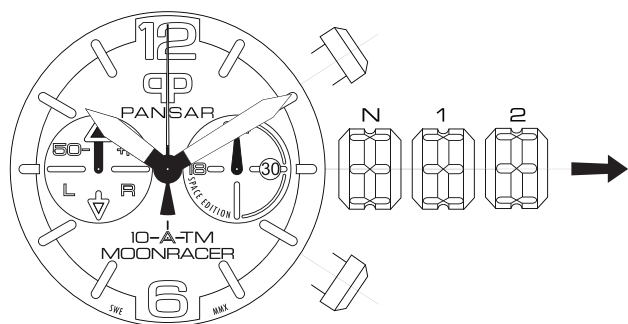

- Pull crown out to the 2nd click position when the second hand is at the 12 o'clock position.
Note: When the crown is in the second click position. Do not press any buttons. Otherwise the chronograph hands will move

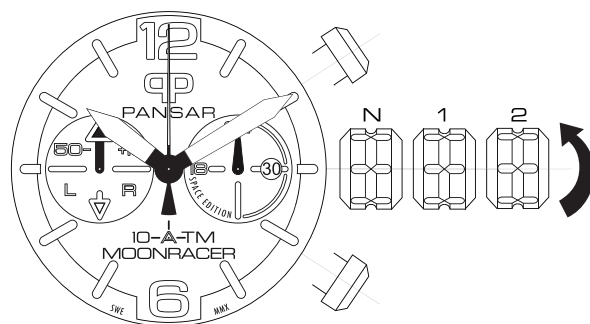

- Turn to set the hour and minute hands.
- Turn clockwise to advance the hour and minute hands past 12:00 AM. Doing so will advance the date to the current date.
- Set the hour and minute hands to the desired time taking AM or PM into consideration.

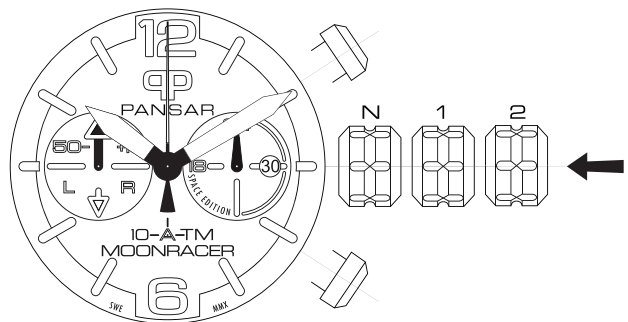

- Push crown back to normal position.

Recommended:

- Do not set the date between 9:00 PM and 1:00 AM. Otherwise, the day may not change properly. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time.
- When setting the minute hand, first advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact minute.

QP

PANSAR®

PANSAR SWEDEN AB
mässvägen, 125 30 Älvsjö, Sweden

Moonracer 001 Space Edition


Cal. VD53B chronograph

Movement Instructions Manual

How to use stopwatch functions:

The stopwatch can measure up to 59' 59" in 1 second increments.

When the measurement reaches 60 minutes, the stopwatch automatically stops counting.

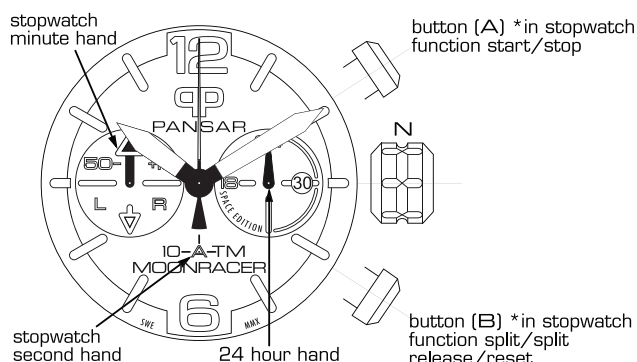

Standard measurement



Accumulated elapsed time measurement



Split time measurement



- The measured time is indicated by the stopwatch hands that move independently of the center and 24-hour hand.
- Measurement and release of the split time can be repeated as many times as necessary by pressing button (B)
- When the measurement is stopped or split time is measured, it stops to indicate the elapsed time.
- After the stopwatch is restarted or split time is released, stopwatch "A" second and- minute hand moves to current time.

Note: If the stopwatch hands do not return to the "0" position when the stopwatch is reset to "0", follow the procedure in "How to adjust the stopwatch".

QP
PANSAR[®]

PANSAR SWEDEN AB
mässvägen, 125 30 Älvsjö, Sweden


Moonracer 001 Space Edition

Cal. VD53B chronograph


Movement Instructions Manual

How to adjust the stopwatch:

If the stopwatch minute- and second hands are not in "0" position, follow the procedure below to set them.

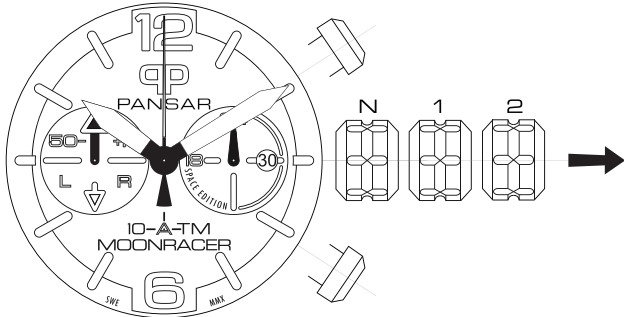


- Pull the crown out to 2nd. click position.

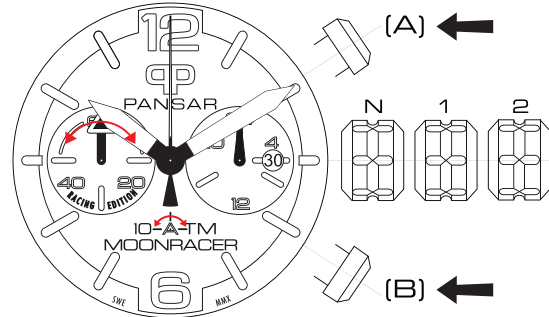

- Press button (A) or (B) to reset the stopwatch second and minute hands to "0" position.
- By pressing button (A), the hands move clockwise.
- By pressing button (B), the hands move counter clockwise.

Note: Stopwatch second and- minute hands moves quickly if button (A) or (B) is kept pressed.

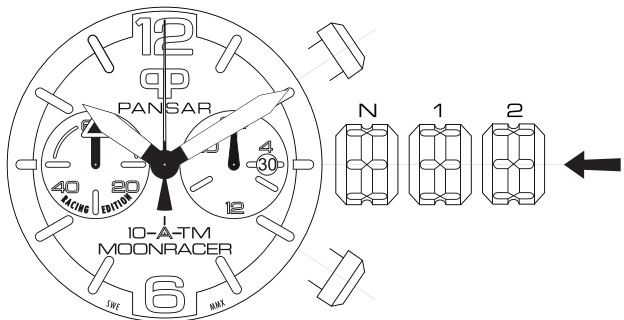

- Push crown back to normal position.

QP
PANSAR[®]

PANSAR SWEDEN AB
mässvägen, 125 30 Älvsjö, Sweden